


Adjusting Amperage on the Yellow Dial

Overview: To adjust the amperage needed to trip the breaker for a ball washer

Tools Needed: 1 large phillips head screwdriver, 1 small phillips head screwdriver

Step 1: Locate the on/off switch for the washer, unscrew the plastic housing in the two locations indicated below on the left, revealed will be the switch with wiring shown on the right

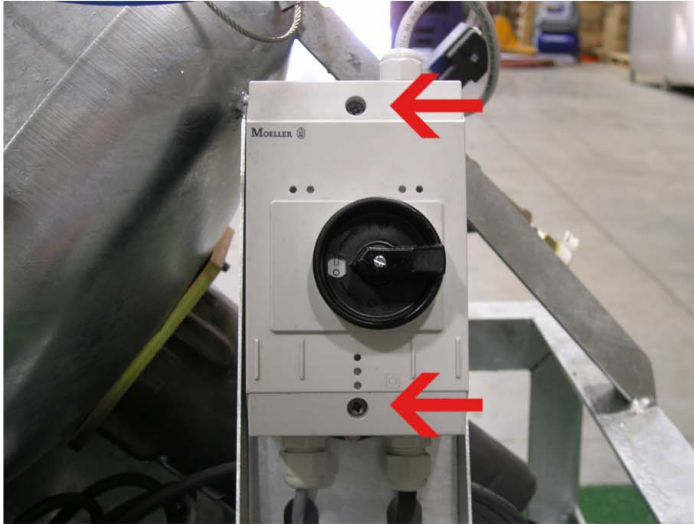

Exposed view of breaker



Step 2: Using the small phillips head screwdriver, adjust the dial to where the 8 and the arrow are aligned as demonstrated in the figures below. For optimal performance this dial should never be set below 8.



Allowed amperage adjustment dial

